



Installation and Removal Guide

Portlight Hinge Pin

Install

To install the cross roll pin, you can use a small hammer to tap the pin back in.

Removal

1. First loosen the set screw on the inside of the portlight
2. To remove the pin, please use a drill bit size 5.5mm or equivalent to take out the pin.
3. Our experience is usually the rolled pin is easy broken during removal and generally needs to be replaced