




## Installation Guide

### Replacing Deck Hatch Gasket

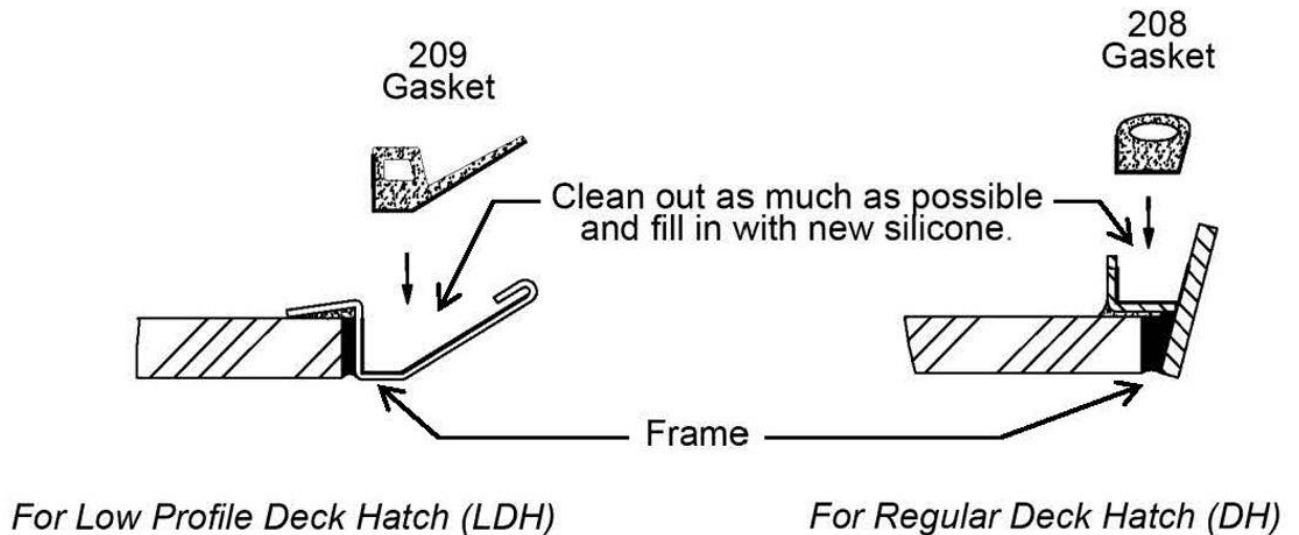

1. Using a screw driver or retractable blade, make a small **“starter cut”** into the old gasket.
2. We recommend ripping as much of the old gasket out as possible. Avoid cutting, because when cut along the sides, it leaves more small pieces vs. pulling the gasket out.
3. Use alcohol/mild solvent to clean out remaining gasket and sealant from rim.
4. Measure gasket length needed, place gasket around rim for measurement, cut to length.
5. Deck hatch corners: Mark where fanned cuts are to be made in gasket for the rounded corners.
6. Bond end pieces of gasket with super glue and let dry completely before placing in the rim.
7. Make sure that the rim is completely dry and cleaned out before adding a small bead of sealant/silicone. Less is more, you can always add more.
8. Inspect rim making sure silicone is evenly distributed, apply more silicone if needed.
9. Close lid to make sure that gasket is seated in the rim, inspect gasket and make sure there are no gaps or buckling when closed or open.
10. Final step is to add any additional silicone sealant, if needed. Close deck hatch lid and let dry for 2-3 days in well-ventilated area.